




User Manual PeopleLink UVC 35B

Product Manual | Edition V 1.0 | Release 022023 | : PPU-PVC-UVC-35B

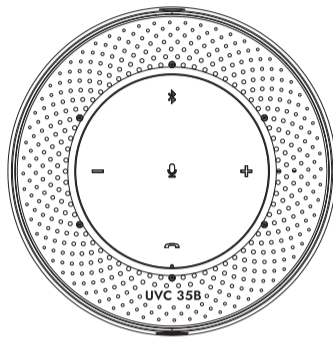

(English Version)

Please read this Manual before setting up UVC 35B conference speakerphone and stick to its requirements strictly for Safety reason. Suggest you save this manual for further inquiries reference.

1

PeopleLink UVC 35B Conference Speakerphone

Product Specifications

Bluetooth Version	5.2
Profile	HSP1.2, HFP1.7, A2DP1.3, AVRCP1.6
Decode	SBC
RF	Class II
Transmission Range (Hz)	2402-2480MHz
Wireless Range	up to 10M
Antenna	FPC
Pairing name	PeopleLink UVC35B
Battery capacity	5200mAh
Charging Time & Input Rating	5 hours, DC 5V, 1.8A input
Working Time	up to 26 hours for calls and up to 52 hours for music playback
Function Keys	Power, Volume +, Volume -, Bluetooth, Call, Mic
Sound Levels	16 levels
Array Microphone	6 mics 360° Omnidirectional
ENC	Environmental Noise Cancelling
AEC	Acoustic Echo Cancellation
Voice boot	Y
Speaker Size	40mm 3W
Frequency Response:	20Hz-20,000Hz
Maximum EIRP Power(dBm) (EU)	≤20dBm

Contents

- PeopleLink Conference Speakerphone
- Bluetooth Dongle
- USB-C Cable
- User Guide

System requirements




- Windows®
- macOS®
- iOS®
- iPadOS®
- Android™

2

PeopleLink UVC 35B Conference Speakerphone

Function key

- A. Bluetooth
- B. Volume+
- C. Volume-
- D. Mic
- E. Call
- F. Power LED
- G. Power
- H. USB-C Port
- I. Dongle

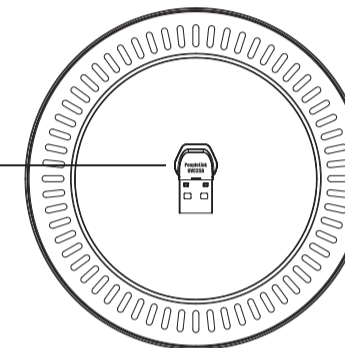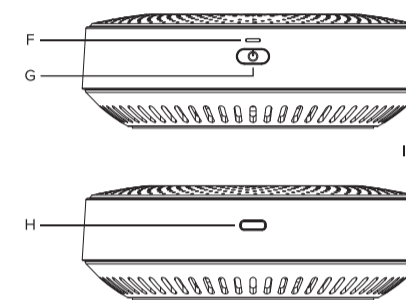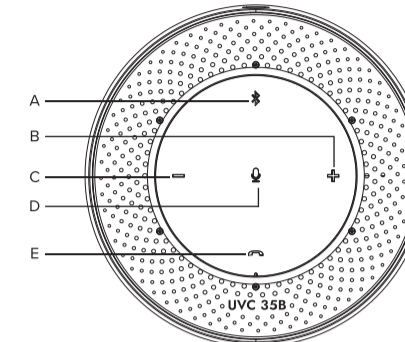

3

PeopleLink UVC 35B Conference Speakerphone

Operating Instructions

Power ON	
Operation	Press and hold power button for 2 seconds.
Description	Press and hold power button for 2 seconds to turn on the speakerphone.
Note	When the speakerphone is ON, the LED near the power button and the volume - and volume + will be white. The Bluetooth LED will flash red and green while in pairing mode and stay green once paired. The microphone LED will be green.
Power OFF	
Operation	Press and hold for 2 seconds.
Description	Press and hold power button for 2 seconds to turn off the speakerphone.
Bluetooth pairing	
Operation	The speakerphone will automatically enter Bluetooth pairing mode when powered on. You can also manually enter Bluetooth pairing mode by pressing and holding the Bluetooth LED for 2 seconds.
Description	The Bluetooth LED will flash red and green while in pairing mode along with the voice prompt "ready to pair". The speakerphone will automatically reconnect to previously paired devices within range. If not previously paired, activate pairing in the Bluetooth menu of your device and select PeopleLink UVC35B. When devices are disconnected manually or out of range the speakerphone it will automatically enter pairing mode along with the voice prompt "ready to pair". If a new connection is not successful after 1 minute the speakerphone will go into standby mode. After 5 minutes in standby mode the speakerphone will automatically turn OFF if there is still no connection.
Note	The Bluetooth LED will flash red and green while in pairing mode and stay green once paired.
Wired connection and charging	
Operation	Connect the USB cable to your device or charger.
Description	Connect the USB cable to your device to enable the optional wired connection. Connecting the USB cable to a charger or device will also charge the speakerphone.
Dongle Connection	
Operation	Insert the Dongle to PC.
Description	Dongle will quick flash green led light after plugging into the computer. When connected, the green light is solid on.

4

PeopleLink UVC 35B Conference Speakerphone

Receive call	
Operation	Press the call LED.
Description	When a call is incoming, the call LED will pulse green. Press the call LED to receive the call and the call LED will turn green during the call.
Note	Not support APP network platform phone call.
Reject call	
Operation	Press and hold the call LED for 2 seconds.
Description	When a call is incoming the call LED will pulse green. Press and hold the call LED for 2 seconds to reject the call and the call LED will turn off.
Note	Not support APP network platform phone call.
End call	
Operation	Press the call LED.
Description	During a call the call LED will be green. Pressing the call LED will end the call and the call LED will turn off.
Note	Not support APP network platform phone call.
Redial last number	
Operation	Double-click the call LED.
Description	While connected via Bluetooth, double-click the call LED to redial the last number called. You will hear a voice prompt "Redialing" and the call LED will turn green.
Note	Only supported when connected via Bluetooth.
Activate Voice Assistant	
Operation	Press and hold the call LED.
Description	When connected via Bluetooth to a device that supports voice assistant, press and hold the call LED for 2 seconds to enable and begin speaking. Press and hold the call LED again for 2 seconds to deactivate the voice assistant.
Note	Not supported on all devices.

5

PeopleLink UVC 35B Conference Speakerphone

Mute	
Operation	Press the Mic LED.
Description	Press the Mic LED to mute. Mic LED will turn red while muted.
Un-mute	
Operation	Press the Mic LED.
Description	Press the Mic LED to un-mute. Mic LED will be red while muted and turn green when un-muted.
Volume	
Operation	Press the - LED or the + LED.
Description	To increase the volume press the + LED and press the - LED to decrease the volume.
Pause and Play music	
Operation	Press the power button.
Description	While using a music app, press the power button once to play or pause music.
Reset to factory settings	
Operation	Press and hold Call LED and Volume + LED for 5 seconds when Bluetooth is disconnected and power is ON.
Description	To reset the speakerphone to original factory settings, press and hold the call LED and volume + LED for 5 seconds while Bluetooth is disconnected, and the speakerphone is powered on. The voice prompt "reset completed" will confirm success, the speakerphone will automatically enter Bluetooth pairing mode, and you will hear the voice prompt "ready to pair".
Power and battery status	
Operation	Insert the USB-C cable into the USB-C port.
Description	When the battery is charged above 70% the LED near the power button will be white. When the battery is charged between 25% and 70% the LED near the power button will flash white once every 30 seconds. When the battery is charged less than 25% the LED near the power button will be red. When charging, the LED near the power button will be pulsing white.

6