


User Manual

Product Manual | Edition | Release 092023 | PPU-PVC-PC3-108P-12X

PeopleLink iCam WHD 1080 12X USB

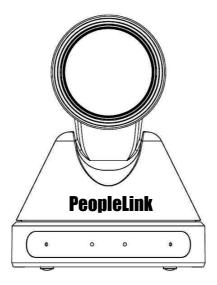

(English Version)

Please read this Manual before setting up iCam WHD 1080 and stick to its requirements strictly for Safety reason. Suggest you save this manual for further inquiries reference.



2018 PeopleLink Unified Communications Pvt. Ltd. All rights reserved. PeopleLink Unified Communications Pvt. Ltd. Q3-A3, 10th Floor, Cyber Towers, Hitech City Madhapur, Hyderabad – 500081 India

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of PeopleLink Under the law, reproducing includes translating into another language or format. As between the parties, PeopleLink, retains title to and ownership of all proprietary rights with respect to the software contained within its products.

Therefore, you must treat the software like any other copyrighted material (e.g., a book or sound recording). Every effort has been made to ensure that the information in this manual is accurate. PeopleLink, is not responsible for printing or clerical errors. Information in this document is subject to change without notice.

Contents

Note
Supplied Accessories
Quick Start5
Features
Product Specification
Main Unit
Size
IR Remote Controller Explanation
RS-232 Interface
VISCA Network Configuration14
Serial Communication Control
Command List
Menu Setting
USB3.0
Maintenance and Troubleshooting

PeopleLink®

Note

• Electric Safety

Installation and operation must accord with electric safety standard.

• Caution to transport

Avoid stress, vibration and soakage in transport, storage and installation.

• Polarity of power supply

The power supply of the product is +12V, the max electrical current is 2A .Polarity of the power supply plug drawing as follows.



• Careful of installation

Do not grasp the camera head when carrying the camera. Don't turn camera head by hand. Doing so may result in mechanical damage.

Don't apply in corrosive liquid, gas or solid environment to avoid damaging the cover which is made up of plastic material.

To make sure no obstacle in rotation range.

Never power on before installation is not completed.

• Don't dismantle the camera

We are not responsible for any unauthorized modification or dismantling.

CAUTION!

The specific frequency of electromagnetic field may affect the image of the camera!


Supplied Accessories

When you unpack, check that all the supplied accessories are included:

Camera1	PCS
AC power adaptor 1	PCS
Power cord1	PCS
RS232 cable1	PCS
Remote controller1	PCS
User manual1	PCS
USB3.01	PCS



Step1. Please check connections are correct before starting

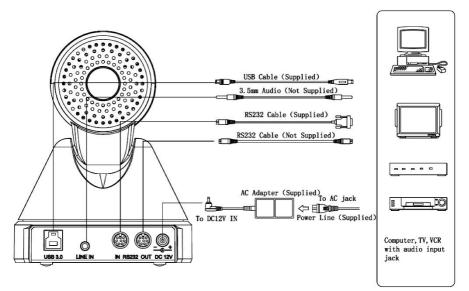

Step2. Power connected to the Camera, the front panel power lamp light.

Step3. Pan-Tilt will rotate to the maximum position of top right after the camera started, then it return to the center, the process of initialization is finished. (Note: If the position preset 0 has been stored, the position preset 0 will be called up after initialization)

PeopleLink®

Features

• Completely New Look

Designed with worm gear transmission, completely new look, mini size, two colors for choosing from.

• Full Function USB Interface

Full function USB interface, compatibility USB3.0 and USB2.0, support audio, support compressed video output, support UVC, UAC protocol.

• Built-in Micphone (Optional)

Built-in micphone for optional, pickup distance up to 5 meters, high sensitivity and low base noise.

• 1080P Full HD

Apply Panasonic's 1/2.7 inch, 2.07 million effective pixels high quality HD CMOS sensor, can reach maximum 1920 x 1080 high resolution and achieve quality image.

• Ultra-high Frame Rate

The output frame rate up to 60fps in 1080P.

• 72.5° Wide-angle Lens + 32x Digital Zoom

Use 72.5° wide-angle high quality lens, support 12x optical zoom, and 32x digital zoom (optional).

• Low-light

High SNR of CMOS sensor combined with 2D and 3D noise reduction algorithm, effectively reduce the noise, even under low illumination conditions, picture can still keep clean and clear.

Remote Control

Using RS232/RS485and USB interface, all the parameters of the camera can be remote controlled.




Product Specification

Model	
Name	PeopleLink iCam WHD 1080 12X USB
Camera	
Video System	1080p/60, 1080p/50, 1080p/30, 1080p/25, 720p/60, 720p/50, 720p/30,
Video System	720p/25
Sensor	1/2.7", CMOS, Effective Pixel: 2.07M
Scanning Mode	Progressive
Lens	12x, f3.5mm ~ 42.3mm, F1.8 ~ F2.8
Digital Zoom	32x (optional)
Minimal Illumination	0.5 Lux @ (F1.8, AGC ON)
Shutter	$1/30s \sim 1/10000s$
White Balance	Auto, Indoor, Outdoor, One Push, Manual
Backlight Compensation	Support
Digital Noise Reduction	2D&3D Digital Noise Reduction
Video S/N	≥55dB
Horizontal Angle of View	72.5° ~ 6.9°
Vertical Angle of View	44.8° ~ 3.9°
Horizontal Rotation Range	±170°
Vertical Rotation Range	$-30^{\circ} \sim +30^{\circ}$
Pan Speed Range	$1.7^{\circ} \sim 100^{\circ}/s$
Tilt Speed Range	1.7° ~ 69.9°/s
H & V Flip	Support
Image Freeze	Support
Number of Preset	255
Preset Accuracy	0.1°
USB Featured	
Omorroto Stratore	Windows XP, Windows Vista, Windows 7, Windows 8, Mac OS X,
Operate System	Linux
Color System/Compression	YUV 4:2:2 / H.264 / MJPEG
Video Format	USB3.0: 1080p/60, 1080p/50, 1080p/30, 1080p/25, 720p/60, 720p/50,



	720p/30, 720p/25USB2.0: 1080p/30, 1080p/25, 1080p/15, 1080p/10,		
	720p/30, 720p/25, 960x540p/30, 960x540p/25, 640x360p/60,		
	640x360p/50		
Audio on USB	Support		
USB Video	UVC 1.0 ~ UVC 1.5		
Communication Protocol			
UVC PTZ	Support		
Input/Output Interface			
USB Interface	1xUSB3.0: Type B female jack		
Audio Interface	1-ch: 3.5mm Audio Interface, Line In		
	1xRS232 In: 8pin Min DIN, Max Distance: 30m, Protocol: VISCA/		
Communication Interface	Pelco-D/Pelco-P		
	1xRS232 Out: 8pin Min DIN, Max Distance: 30m, Protocol: VISCA		
	network use only		
	1xRS485: Share with RS232 Out, Max Distance: 1200m, Protocol:		
	VISCA/Pelco-D/Pelco-P		
Power Jack	JEITA type (DC IN 12V)		
Generic Specification			
Input Voltage	DC 12V		
Current Consumption	1.0A (Max)		
Operating Temperature	$-10^{\circ}C \sim 40^{\circ}C (14^{\circ}F \sim 104^{\circ}F)$		
Storage Temperature	$-40^{\circ}C \sim 60^{\circ}C (-40^{\circ}F \sim 140^{\circ}F)$		
Power Consumption	12W (Max)		
MTBF	>30000h		
Size	128x118x158mm		
Net Weight	0.91K g		



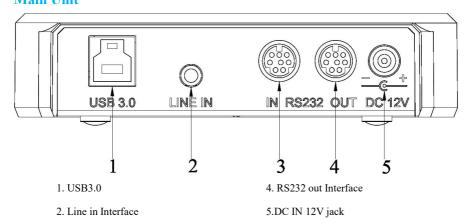


3. RS232 IN Interface

www.peoplelinkvc.com




Size

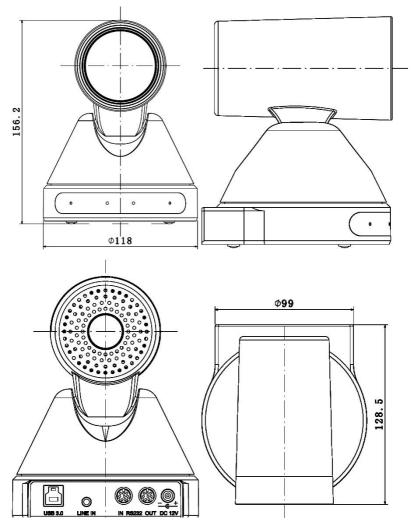



IR Remote Controller Explanation

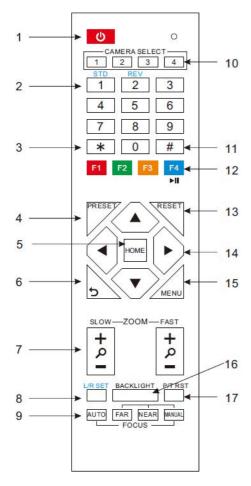

1. Standby Button

Press this button to enter standby mode. Press it again to enter normal mode. (Note: Power consumption in standby mode is approximately half of the normal mode)

2. Position Buttons

To set preset or call preset

3. *Button

Used with other buttons

4. Set/Preset Buttons

Set preset: Store a preset position

[SET PRESET] + Numeric button (0-9): Setting a corresponding numeric key preset position

5. Pan-Tilt control Buttons

Pressing the Pan-Tilt back to the middle position

6. MENU

MENU: enter or exit OSD MENU

7. Zoom Buttons

Slow Zoom: Zoom In [+] or Zoom Out [-] slowly

Fast Zoom: Zoom In [+] or Zoom Out [-] fast

8. Pan-Tilt L/R set

Press with 1 buttons and 2 buttons setting the direction of the Pan-Tilt

L/R Set +1[STD]: set the Pan-Tilt turn the same direction as the L/R Set

L/R Set +2[REV]: set the Pan-Tilt turn the opposite direction as the L/R Set

9. Focus Buttons

Used for focus adjustment.

Press [AUTO] adjust the focuses on the center of the object automatically. To adjust the focus manually.



Press [MANUAL] adjust the focus on the center of the object manual

MANUAL button, and adjust it with [Far] (Focus on far object) and [NEAR] (Focus on near object)

10. Camera Select Buttons

Press the button corresponding to the camera you want to operate with the remote controller.

11. # Button

Used with other buttons

12. Set Camera IR Address Buttons

[*]+[#]+[F1]: Address1

[*]+[#]+[F2]: Address2

[*]+[#]+[F3]: Address3

[*]+[#]+[F4]: Address4

13. Clear Preset Buttons

Clear preset: Erase a preset position

[CLEAR PRESET] + Numeric button (0-9)

Or: [*]+[#]+[CLEAR PRESET]: Erase all the preset individually

14. Pan/Tilt Control Buttons

Press arrow buttons to perform panning and tilting. Press [HOME] button to face the camera back to front

15. Back buttons

Press the OSD menu return to the superior.

16. BLC (Backlight Compensation) Button

BLC ON/OFF: Press this button to enable the backlight compensation. Press it again to disable the backlight compensation.(NOTE: Effective [*]+[#]+[8]: Look the camera version only in auto exposure mode)

Note: If a light behind the subject, the subject will become dark. In this case, press the backlight ON / OFF button. To cancel this function, press the backlight ON / OFF button.

17. Pan/Tilt reset

Presset Pan/Tilt self-test.

18. Image freezing function


Manually freeze: Open the freezing function after press the remote control [F4], display "Freeze" on the left upper corner character, after 5 seconds display disappear auto matically. If you want to cancel the freeze, press [F4] key and then can return to normal, display "Unfreeze" on the left upper corner, after 5 seconds display disappear automatically.


Recalling the Preset image Freeze: By the OSD Menu Setting "Recalling the Preset image Freeze" function. After the function is opened, the screen will stay in before Recalling the Preset when Recalling the Preset, the screen can be switched to the preset position screen until the camera points to the preset position.

19. Shortcut Set


[*]+[#]+[1]: OSD menu default English [*]+[#]+[3]: OSD menu default Chinese [*]+[#]+[4]: Default IP address [*]+[#]+[5]: Save OSD [*]+[#]+[6]: Quickly recover the default [*]+[#]+[9]: Quickly set up inversion



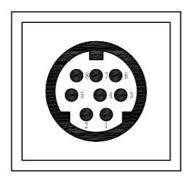


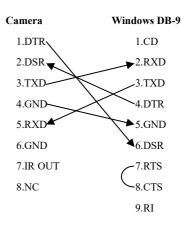

No.	Function	
1	DTR	
2	DSR	
3	TXD	
4	GND	
5	RXD	
6	GND	
7	IR OUT	
8	NC	

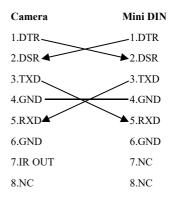



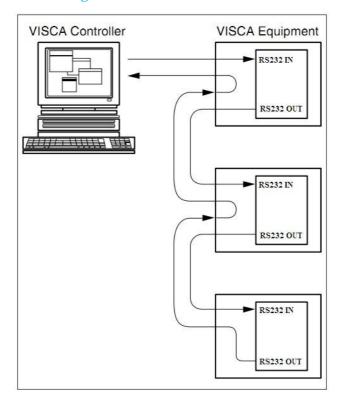



Serial Communication Control

In default working mode, the camera is able to connect to a VISCA controller with RS232C serial interface.

RS232 Communication Control:

The camera can be controlled via RS232 ,the parameters of RS232C are as follows:

Baud rate: 2400/4800/9600 bit/s.

Start bit: 1 bit.

Data bit: 8 bits.

Stop bit: 1bit.

Parity bit: none.

RS485 Communication Control:

The camera can be controlled via RS485,Half-duplex mode: Baud rate: 2400/4800/9600 bit/s. Start bit: 1 bit. Data bit: 8 bits. Stop bit: 1bit. Parity bit: none.

Pan-Tilt will rotate to the maximum position of top right after the camera started, then it return to the center, the process of initialization is finished. (Note: If the position preset 0 has been stored, the position preset 0 will be called up after initialization) Then the users can control the camera with commands in the command list.

Command List

Ignore

Note:

The camera serial standard VISCA/Pelco-D/Pelco-P, if the need for the secondary development, According to standard protocol to control the camera. If you need VISCA/Pelco - D/Pelco - P protocol command list in detail, please contact the manufacturer.



Menu Setting

1.MENU

Press [MENU] button to display the main menu on the normal screen, using arrow button to move the cursor to the item to be set. Press the [HOME] button to enter the corresponding sub-menu.

MENU
Exposure
Color
Image
P/T/Z
Noise Reduction
Setup
Communication Setup
Restore Default
[Home] Enter
[Menu] Exit

2. EXPOSURE

Move the cursor to the Exposure item in the main menu and press [home] button, EXPOSURE menu appears, as shown in the following figure.

EXPOSURE Mode Auto ExpCompMode On ExpComp +6Backlight Off Gain Limit 3 Anti-Flicker 50Hz Meter Average DRC V Select Item ♦ Change Value [Menu] Back

Mode: Exposure mode. Optional items: Auto, Manual, SAE, AAE, Bright

ExpCompMode: Exposure compensation mode, Optional items: On, Off (Effective only in Auto mode)

ExpComp: Exposure compensation value,

Optional items: $-7 \sim 7$ (Effective only in

ExpCompMode item to On)

Gain Limit: Maximum gain limit. Optional items: $0 \sim 15$ (Effective only in Auto, AAE ,Bright mode)


Backlight: Set the backlight compensation, Optional items: On, Off (Effective only in Auto mode)



DRC: DRC strength, Optional items: 0 ~ 8. Bright: Intensity control, Optional items: 00~17. (Effective only in Bright mode) Anti-Flicker Flicker: Anti-flicker. Optional items: Off, 50Hz, 60Hz (Effective only in Auto, Bright mode) Meter: Optional items: Average, Center, Bottom, Top Iris: Aperture value. Optional items: F1.8, F2.0,F2.4,F2.8,F3.4,F4.0,F4.8,F5.6,F6.8,F8.0,F9.6, F11.0,Close (Effective only in Manual, AAE mode) Shutt: Shutter value. Optional items: 1/30, 1/60,1/90,1/100,1/125,1/180,1/250,1/350,1/500,1/ 725,1/1000,1/1500,1/2000,1/3000,1/4000,1/6000, 1/10000 (Effective only in Manual, SAE mode)

3. COLOR

Move the cursor to the Color item in the main menu and press [home] button, COLOR menu appears, as shown in the following figure.

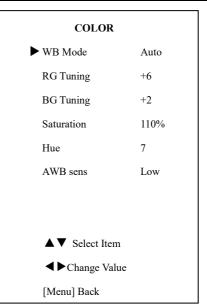

WB-Mode: White balance mode. Optional items: Auto, Indoor, Outdoor, Onepush, Manual

RG: Red gain. Optional items: 0~255 (Effective only in Manual mode)

BG: Blue gain. Optional items: 0~255

(Effective only in Manual mode)

RG Tuning: Red gain fine-tuning, Optional items: $-10 \sim +10$ (Effective only in AWBsens is Low)

BG Tuning: Blue gain fine-tuning, Optional items: $-10 \sim +10$ (Effective only in AWBsens is Low)

Sat.: Saturation. Optional items: 60% \sim 200%.

Hue: Chroma adjustment, Optional items:0 ~




14

AWBsens: The white balance sensitivity, Optional items: Normal, High, Low.

4. IMAGE

Move the cursor to the Image item in the main menu and press [home] button, IMAGE menu appears, as shown in the following figure.

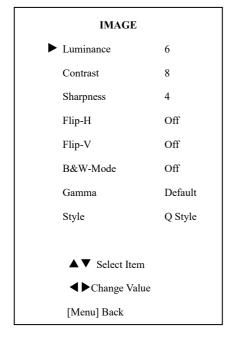


Luminance: Brightness adjustment. Optional items: $0 \sim 14$

Contrast: Contrast adjustment. Optional items: $0 \sim 14$

Sharpness: Sharpness adjustment. Optional items: Auto, $0\sim 15$

Flip-H: Image flipped horizontally. Optional items: On, Off.
Flip-V: Image Flip Vertical. Optional items: On, Off
B&W-Mode: Image color. Optional items: On, Off
Gamma: Optional items: Default, 0.45, 0.5,
0.56, 0.63
Style: Optional items: Norm, Clarity, Bright, Soft,
5Q, Q Style.

5.P/T/Z

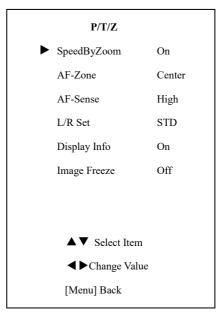

SpeedByZoom: The depth of field scale switch, Optional items: On, Off

AF-Zone: Interested in focusing area, Optional items: Top, Center, Bottom




AF-Sense: Automatic focusing sensitivity options, Optional items: Low, Normal, High L/R Set: Optional items: STD, REV Display Info Optional items: On, Off

Image Freeze: Optional items: On, Off

6. NOISE REDUCTION

Move the cursor to the Noise Reduction item in the main menu and press [home] button, NOISE REDUCTION menu appears, as shown in the following figure.

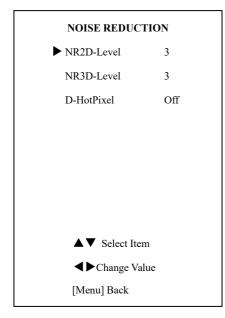

NR2D-Level: 2D noise reduction. Optional items: Off, Auto, $1\sim 5$

NR3D-Level: 3D noise reduction. Optional items: Off, $1 \sim 8$

D-HotPixel: Dynamic bad points, Optional

items: Off, $1 \sim 5$

7. SETUP

Move the cursor to the Setup item in the main menu and press [home] button, SETUP menu appears, as shown in the following figure.

SETUP		
► Language	EN	
DVIMode	DVI	
Video Format	1080P60	
▲▼ Select Item		
♦ Change Value		
[Menu] Back		
[Menu] Back		

Language: menu language, Optional items:

EN, Chinese, Russian

DVI Mode, Optional items: DVI, HDMI

Video Format: Optional items: 1080P60, 1080P50, 720P60, 720P50, 1080P30, 1080P25,

720P30,720P25

8. COMMUNICATION SETUP

Move the cursor to the Setup item in the main menu and press [home] button,

COMMUNICATION SETUP menu appears, as



shown in the following figure.

COMMUNICATION SETUP		
► Protocol	VISCA	
V_Address	1	
V_AddrFix	Off	
Net Mode	Serial	
Baudrate	9600	
▲▼ Select Item		
 ♦ Change Value 		
[Menu] Back		

Protocol: Control protocol type. Optional items: AUTO, VISCA, PELCO-D, PELCO-P

V_Address: Protocol address, To be decided according to the agreement, AUTO, VISCA protocol Optional items: $1 \sim 7$

P_D_Address: PELCO-D protocol Optional items: $0 \sim 254$

P_P_Address: PELCO-P protocol Optional items: $0 \sim 31$

V_AddrFix: If I can change through the serial port of infrared switch, Optional items: On, Off

(When set to On, useless in 88 30 01 FF

Command)

Net Mode: Set the serial port control


networking, Optional items: Serial, Paral

Baudrate: Serial port baud rate. Optional

items: 2400, 4800, 9600

9. RESTORE DEFAULT

Move the cursor to the Restore Default item in the main menu and press [home] button, RESTORE DEFAULT menu appears, as shown in the following figure.

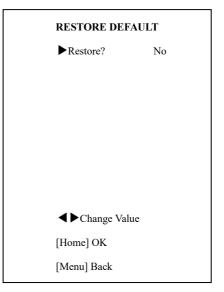

Restore: Confirm restore factory settings.

Optional items: Yes, No

Note: Press [HOME] button to confirm, All parameter restore default, Include IR Remote address and VISICA Address

Save: Save Options. Optional items: Yes, No



USB3.0

Camera support UVC protocol, compatible USB2.0 & USB3.0. USB3.0 support 1920x1080p/60 max output. USB2.0 support 960x540p/60 max output. Support OS Windows XP/2003/VISTA/7/8 and other system、Linux、Mac OS General software Windows: AMCAP, VLC, Debut Video Capture, etc. Linux:V412 software driver and VLC media player, etc.

Mac OS: FaceTime. iChat, Photo Booth and Debut Video Capture, etc.

Notice:

Recommend making AMCAP version 8.0 in Windows, which software performance is more relatively stable. When using high version of AMCAP in low configuration system, it will make the stream rendering slow.

NOTE!

When camera first time accessed by USB cable, automatically install UVC related drivers.



Maintenance and Troubleshooting

Camera Maintains

- If camera will not be used for a long time, please turn off the power switch, disconnect AC power cord of AC adaptor to the outlet.
- Use soft cloth or tissue to clean the camera cover.
- Please use the soft dry cloth to clean the lens. If the camera is very dirty, clean it with diluted neuter detergent. Do not use any type of solvents, which may damages the surface.

Unqualified Application

- No shooting extreme bright object for a long period of time, such as sunlight, light sources, etc.
- No operating in unstable lighting conditions, otherwise image will be flickering.
- No operating close to powerful electromagnetic radiation, such as TV or radio transmitters, etc.

Troubleshooting

Image

- No image
 - 1. Check whether the power cord is connected, voltage is OK, POWER lamp is light.
 - 2. Check whether the camera can self-test after startup.
 - 3. Check the BOTTOM switch and make sure the two switches are both set OFF.
 - 4. Check video cable is connected correctly.
- Abnormal display of image

Check video cable is connected correctly.

- Image dithering even at widest zoom position
 - 1. Check whether camera is fixed correctly.
 - 2. Make sure if there are something like vibration machine or other things nearby.

Control

- IR remote controller cannot control the camera
 - 1. Change the battery
 - 2. Check the camera working mode.



- 3. Check IR address of the Remote Commander is set correctly.
- Serial communication cannot control the camera
 - 1. Check the camera working mode.
 - 2. Check control cable is connected correctly.